
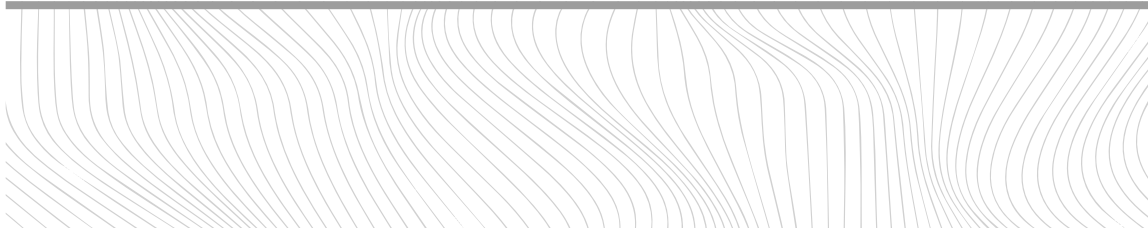



# User manual

3 in 1 Mini-bites maker

---

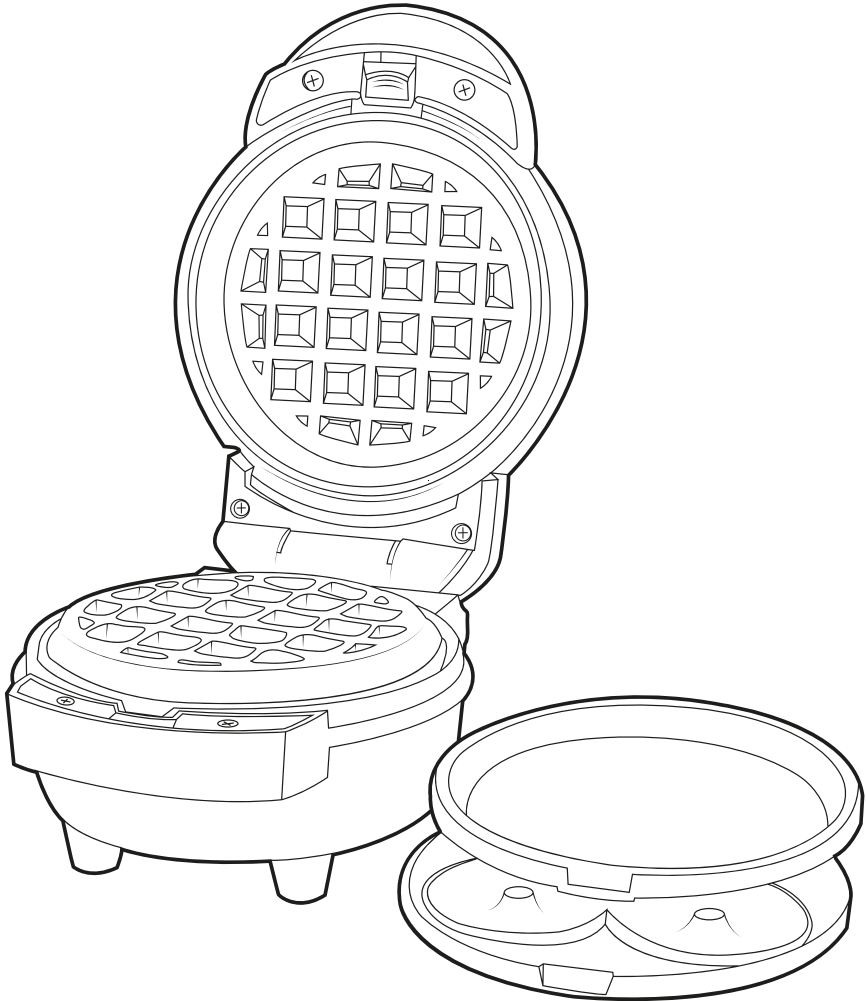

## Description of parts

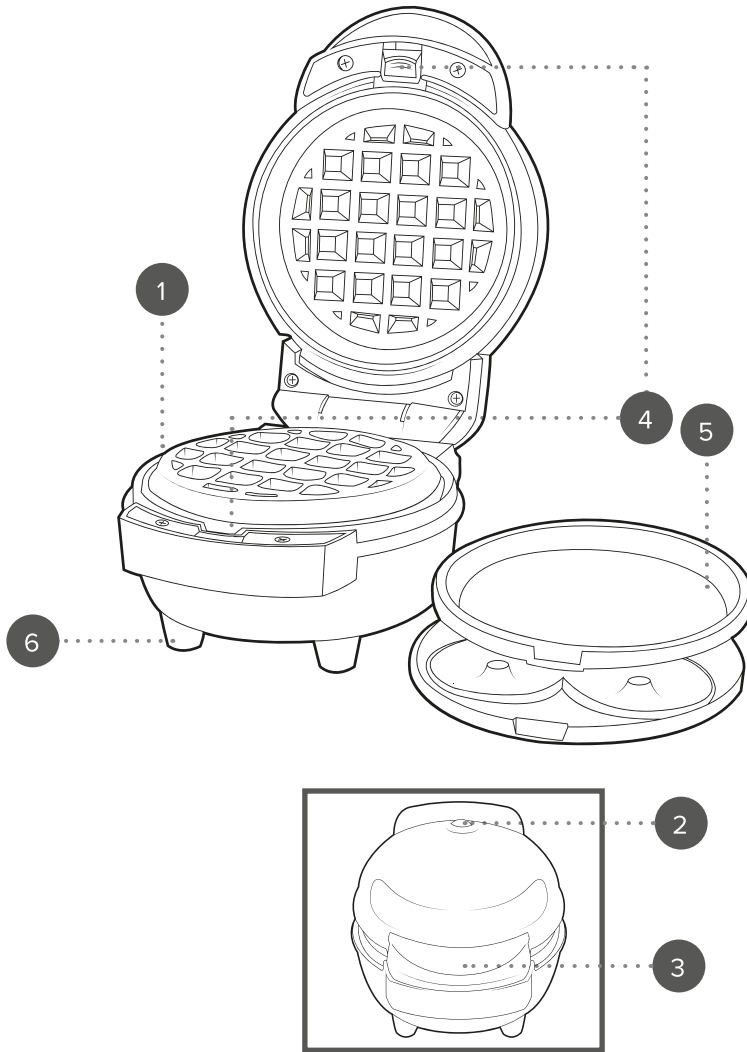

1. 3 In 1 Mini Maker
2. Indicator light
3. Cool-touch handles

4. Plate release buttons
5. Interchangeable cooking plates
6. Non-slip feet

Please retain instructions for future reference.

## **SAFETY INSTRUCTIONS**

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not touch any sections of the appliance that may become hot during use, as this may cause injury.
- Do not use the appliance near or below flammable materials, such as curtains, wall cupboards or shelves.
- Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the

- non-stick surface.
- Always unplug the appliance after use and before any cleaning or user maintenance.
  - Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
  - Always unplug the appliance after use and ensure it has cooled fully before performing any cleaning, user maintenance or storing away.
  - Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
  - Use of an extension cord with the appliance is not recommended.
  - This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
  - This appliance is intended for domestic use only. It should not be used for commercial purposes.
  - The outer surface of the appliance may get hot during operation.



**CAUTION:** Hot surface – do not touch the hot section or heating components of the appliance. Take care not to pour water on the heating element.



**WARNING:** Keep the appliance away from flammable materials.

## Care and Maintenance

**STEP 1:** Before attempting any cleaning or maintenance, unplug the snack maker from the mains power supply and check that it has fully cooled.

**STEP 2:** Wipe the snack maker housing with a soft, damp cloth and dry thoroughly.

**STEP 3:** Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

**STEP 4:** Remove baked-on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe them clean with a paper towel or nonabrasive scourer.

Do not immerse the snack maker in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the snack maker, or its accessories, as this could damage the surface.



**NOTE:** The snack maker should be cleaned after each use.

## Instructions for Use Before First Use

**STEP 1:** Switch off and unplug the snack maker from the mains power supply.

**STEP 2:** Wipe the snack maker housing with a soft, damp cloth and dry thoroughly.

Clean the cooking plates in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the snack maker in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the snack maker, as this could cause damage.



**NOTE:** When using the snack maker for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the snack maker.

## Installing or Changing the Cooking Plates

**STEP 1:** Open the snack maker by lifting the lid.

**STEP 2:** Select the required cooking plates, checking that both plates match.

**STEP 3:** Position the lower cooking plate inside the snack maker and align with the heating element. Press gently until it clicks into position. Repeat for the upper cooking plate.



**NOTE:** The non-stick plates will only fit one way into the snack maker.

## Using the Snack Maker

**STEP 1:** Before each use, carefully apply a thin coat of cooking oil to the cooking plates, rubbing it in with a paper towel. This will help to prolong the life of the non-stick coating and stop food from sticking.

**STEP 2:** Prepare the ingredients to be cooked.

**STEP 3:** Install the required cooking plates following the instructions in the section entitled 'Installing or Changing the Cooking Plates'.

**STEP 4:** Plug in and switch on the snack maker at the mains power supply and preheat for approx. 5 minutes. The indicator light will illuminate to indicate that the snack maker is preheating. The indicator light will switch off once the required temperature has been reached and the snack maker is ready to use.

**STEP 5:** Using heat-resistant gloves, carefully open the lid.

Add the prepared ingredients to the lower cooking plate and then carefully close the lid.

**STEP 6:** Cook for the required time; check periodically by carefully opening the lid.

**STEP 7:** Once cooking is complete, use heat-resistant gloves to carefully open the lid and then remove the treats with a heat-resistant plastic or wooden spatula.

**STEP 8:** Switch off and unplug the snack maker from the mains power supply.

**STEP 9:** Leave the lid open and allow to cool.



**NOTE:** Always preheat the cooking plates before starting to cook. Allow plenty of time for the snack maker to cool before installing the other cooking plates. During use, the indicator light will cycle on and off to indicate that the snack maker is maintaining the temperature. Do not overfill the cooking plates; the ingredients may expand whilst cooking. When baking multiple batches of treats, close the lid after removing each batch to maintain the heat.



**CAUTION:** Exercise caution during cooking; the snack maker will emit steam.



**WARNING:** The snack maker and cooking plates get very hot during use; always use heat-resistant gloves to avoid injury.

## Removing the Cooking Plates

**STEP 1:** Allow the snack maker to cool fully before attempting to remove the cooking plates.

**STEP 2:** Press the plate release buttons on the front of the snack maker; the cooking plates will pop up slightly, making it easier for them to be lifted off.

**STEP 3:** Remove each plate by holding it firmly with two hands, then slide and lift out of the snack maker.



**CAUTION:** Always allow the cooking plates to cool fully before attempting to remove them from the snack maker; failure to do so will cause injury.

## Using the Pancake Plates

**STEP 1:** Once the snack maker has preheated, pour the prepared batter into the centre of each mould on the lower pancake plate. Spread it out using a heatproof plastic or wooden spatula and close the lid.

**STEP 2:** Cook for approx. 4 minutes or until the pancakes are golden brown and soft to touch. Check the cooking progress periodically by carefully opening the lid.

**STEP 3:** Once cooking is complete, switch off and unplug the snack maker from the mains power supply. Leave the lid open and allow to cool.

**STEP 4:** Carefully remove the pancakes by gently loosening the edges from the pancake plate with a heatproof plastic or wooden spatula.

**STEP 5:** Once cool, the pancake plates can be removed and washed in warm, soapy water and dried thoroughly.



**NOTE:** Do not overfill the wells as the pancake batter will expand during cooking. Fill each well to approx.  $\frac{2}{3}$  of its capacity.



**WARNING:** Exercise caution when using the snack maker to avoid contact with escaping heat and steam.

## Using the Interchangeable Plates

**STEP 1:** Once the snack maker has preheated, pour the prepared batter into the centre of each well on the lower cooking plate and then close the lid.

**STEP 2:** Cook for approx. 8 minutes or until the snacks are golden brown and soft to touch. Check the cooking progress periodically by carefully opening the lid.

**STEP 3:** Once cooking is complete, switch off and unplug the snack maker from the mains power supply. Leave the lid open and allow to cool.

**STEP 4:** Carefully remove the snacks by gently loosening the edges from the cooking plate with a heatproof plastic or wooden spatula.

**STEP 5:** Once cool, the cooking plate can be removed and washed in warm, soapy water and dried thoroughly.



**NOTE:** Do not overfill the wells as the batter will expand during cooking. Fill each well to approx.  $\frac{2}{3}$  of its capacity.



**WARNING:** Exercise caution when using the snack maker to avoid contact with escaping heat and steam.

## Hints and Tips

1. Be careful not to over-mix the batter, as this can affect the texture of the treats.
2. Sieving dry ingredients, such as flour, will help to guarantee a smooth consistency and avoid any lumps.
3. Always use butter or cooking spray to precondition the non-stick plates. This will help to protect the non-stick coating and make it easier to remove the finished snacks.
4. Wait for the batter to distribute evenly to avoid the risk of overfilling.
5. Avoid opening the snack maker during the first few minutes of cooking, as it will allow heat to escape.
6. Using heat-resistant plastic or wooden utensils will help to protect the non-stick coating.
7. To save time when using the snack maker, prepare the ingredients and mixtures well in advance.

## Storage

Before storing in a cool, dry place, check that the snack maker is cool, clean and dry. Never wrap the cord tightly around the snack maker; wrap it loosely to avoid causing damage.

## Troubleshooting

Symptom	Possible Cause	Corrective Action
The cooking plates will not fit into the snack maker.	The cooking plates have not been aligned properly.	Make sure that the cooking plates are aligned and locked into position. Check that the cooking plates are sufficiently cool, as heat can cause certain materials to expand.

## Specifications

Product code: EK5535

Input: 220–240 V~ 50–60 Hz

Output: 400 W



#### Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Limited.,  
19 Baggot Street Lower, Dublin DO2 X658. **ROI.**

**MADE IN CHINA.**

CD060223/MD050623/V2